AV Benching
(800)328-6378
Info@AVBenching.com

Drawn By BLR 11/13/25

Left Fixed Leg Corner Template

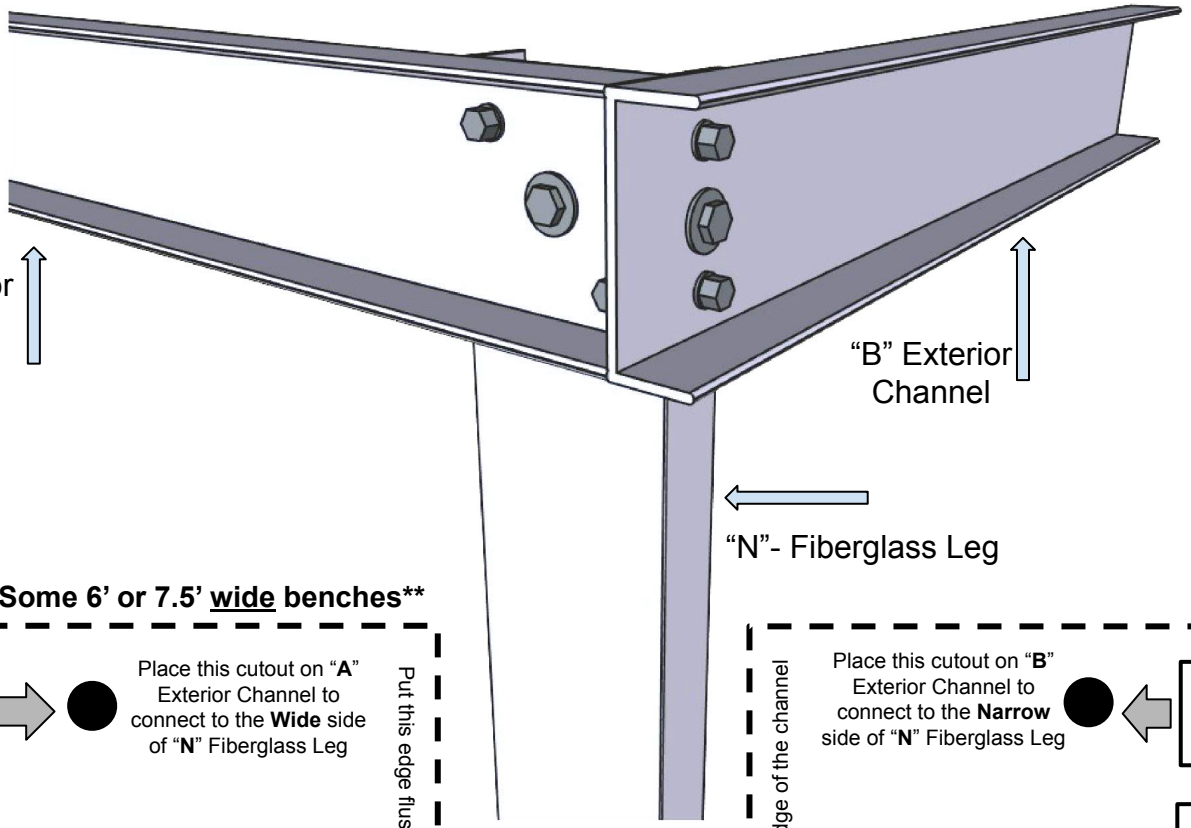

Access more copies?
Scan Below
AVBenching.com

****Not used on 2' , 4.5', Some 6' or 7.5' wide benches****

Part "S" #12 X ¾" Screw → Place this cutout on "**A**" Exterior Channel to connect to the **Wide** side of "**N**" Fiberglass Leg

Drill **¼" Hole To use provide hole for part "V" Hex Bolt ¼"X 1"**

Part "S" #12 X ¾" Screw

Put this edge flush along the edge of the channel

Cut along dotted lines

Place this cutout on "**B**" Exterior Channel to connect to the **Narrow** side of "**N**" Fiberglass Leg ← **Part "S" #12 X ¾" Screw**

Drill **¼" Hole To use provide hole for part "V" Hex Bolt ¼"X 1"**

Part "S" #12 X ¾" Screw

Put this edge flush along the edge of the channel